<b>G</b> 1	Aeasurement Plan Editor Features				-		×
x			~				
	Travel	>	^				
ŢŢ.	Probing	>					
¥	Stylus system	,					
	Units	>	_ <b>×</b>				
	VANT N		🗸 🗹 Display for	mulas Set T	o getActual("Poi	nt1'').×	
WAST	VAST Navigator	>	Туре	Value			$\sim$
	Manual Point Masking	>	Point				_ 1
	Man CNC Mode		Point Point	getActual("Point1").×			_
	Setup Mode	_	Point				- 1
a.	Printer	-	Point				- 1
-	CMM Parameters	,					- 1
	Geometry (evaluation settings)	>					
	Geometry (Nominal data)	>	Inner/Outer identifier				
	Strategy	>	Workpiece Alignmen	t			
	Warning Limits	>	× 🝃				
	-		Y				
			Z				
			i				
			j				
			k				
			A1				
			A2				
			Angle Of Inclination				
			Rotation angle				
			Start angle				
<			Angle Range				>
			Diameter				
			Second Diameter	C	K Cancel	He	p
			Length				

Copy the formula out of Point 2 from <Set To> field

C Measurement Plan Editor Features				_	o ×
x	~				
Inner/Outer identifier Workpiece Alignment	^				
X Y		1			
YZ	/				
i	×				
i i	🖉 🗹 Displ	ay formulas	Set To getA	ctual("Point1")	.×
Identifier	Туре	Value		1	Cut
Point1	Point	Taluc			Сору
Point2	Point	getActualf	"Point1").×		Paste
Point3	Point	300.000.(			
Point4	Point				
Point5	Point				
	Ç				
<					>
			ОК	Cancel	Help

Then select the features where the formula has to go and paste the formula

In the <Set To> field !

C. Measurement Plan Editor Features						— C	- ×	
×	~							
Inner/Outer identifier	^							
Workpiece Alignment X								
Ŷ								
Z								
i								
j	~	🗹 Display for	mulas	Set To	getActual("F	oint1'').:	Cut	
Identifier	Ту	pe	Value				Сору	,
Point1	Poi						Past	e
Point2	Poi		getActual("P	oint1'').x			13	
Point3	Poi							
Point4	Poi							
Point5	Poi	int						

## Hit <Return> after <paste> will bring the formula in the selected features

🕞 Measurement Plan Editor Features			_		×
x	~				
Inner/Outer identifier	^				
Workpiece Alignment					
X Y					
Y					
Z					
j	🗸 🗹 Displa	ay formulas Set To ge	etActual("Point	1'').×	
Identifier	Туре	Value			^
Point1	Point				_
Point2	Point	getActual("Point1").x			_
Point3	Point	getActual("Point1").x			
Point4 Point5	Point Point	getActual("Point1").× getActual("Point1").×			
<					>
		ОК	Cancel	He	lp

The same you can do with Y