

RT Functions

Ready: Make s

CMM Meas

- Stylus system
- Measurement Plan
- Measurement Plan Information
- Features representation...
- Features Settings Editor...
- Characteristics Settings Editor...
- Compatibility Settings ...
- Measurement Plan Comment...
- Preassignment for New Features...
- Save / Load Defaults...
- Space Point Mode
- Define Report...
- Report header parameters...
- Results to File...
- Name for output files
- Design custom report
- Utilities
- Function call

Properties

General Evaluation Filter/Outlier Strategy C.D

Strategies for new features. These settings are system settings and effective for all measurement plans.

Settings

Name: Current settings

Save Delete

Default settings

- Enabled
- Enabled
- Enabled
- Enabled
- Enabled
- Enabled
- Enabled

Clearance Data

Circle Path [1 Section]

OK Reset

Strategy

Default Setting for Circle

Clearance Data

Circle Path [1 Section]

OK Reset

Circle Path

Default Setting for Circle

Speed

- Step Width
- Number of points

Automatic Calculation

15.0000

0.0000

500

Single points

Basic options Special Settings

Start Angle 0.0000

Angle Range 380.0000

Tangential probing (Default) Yes

Start height Measuring Height 0.0000

OK Reset

