
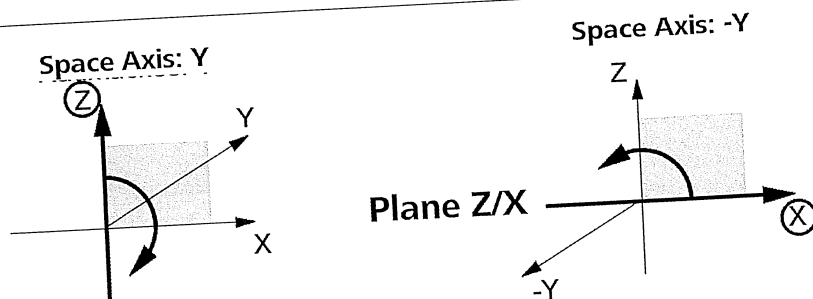
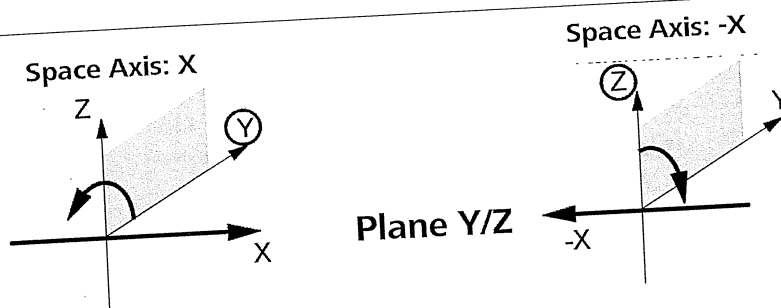


Reference axis and rotation sense with default setting

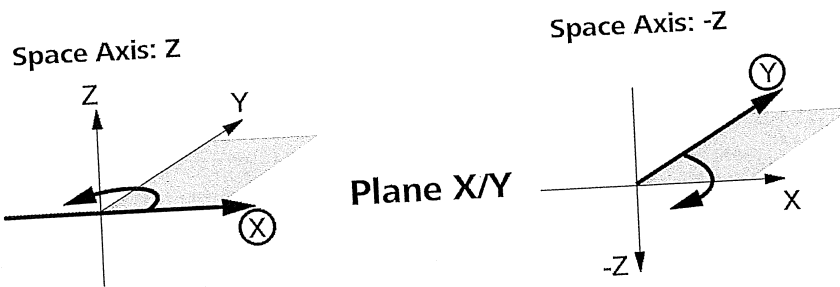


CALYPSO_Basis_504_EN_SE5-AS_001

6 System Settings


Mathematic sign with projected angle

Plane X/Y


Reference: Y

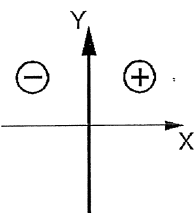


e.g.
A1= +10°

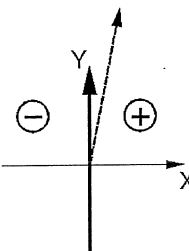

Reference: -Y

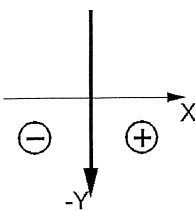


e.g.
A1= -10°

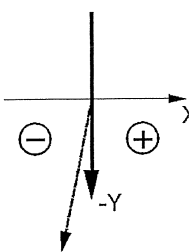


Plane Y/Z


Reference: Z

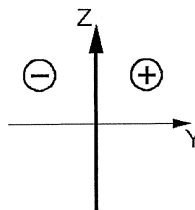


e.g.
A1= +10°

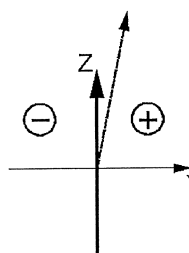

Reference: -Z

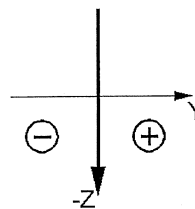


e.g.
A1= -10°

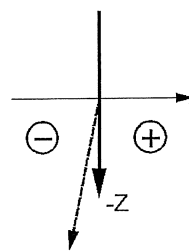


Plane Z/X


Reference: X

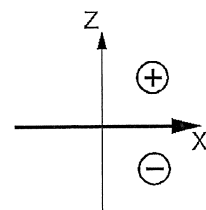

e.g.
A1= +10°

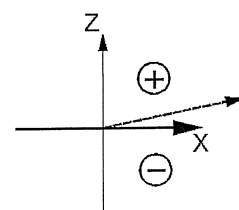

Reference: -X

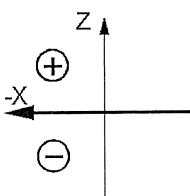

e.g.
A1= -10°

