

Pallet Parameters

Pallet Name: **5**

Comment:

Pallet Alignment:

Regular

Parts referring to pallet

Fixture Program(CNC)

Part Alignment:

Base Alignment

Start Alignment

Belt Housing

Group Columns

Distance:

Number:

Group Rows

Distance:

Number:

Automatic Run

File Configuration Edit Desk Measurement Stylus system

Layer 1

View

<0>

No Name(Be)

Automatic Run

File Configuration Edit Desk Measurement Stylus system Navigation Tools 2

Layer 1

View

<0>

No Name(Belt Housing)

Navigation Tools 2

7

Measurement Plan Definition

Name:

Selection

Base Alignment

Start Alignment

Belt Housing

Fixture Program(CNC)

All Characteristics

Current Selection

Parameter File:

Result

Use custom printout

Compact printout

Display plots

Print plots

Excel-printout

Send results to printer Copies

PDF

PostScript

Results to file

Table File

Merge File

Q-DAS PTX PiWeb

DMIS

CMM

Order of run

From Feature List

Navigate-Feature To Feature


Use Clearance Plane

Run Mode

Normal

Speed in mm/s


300

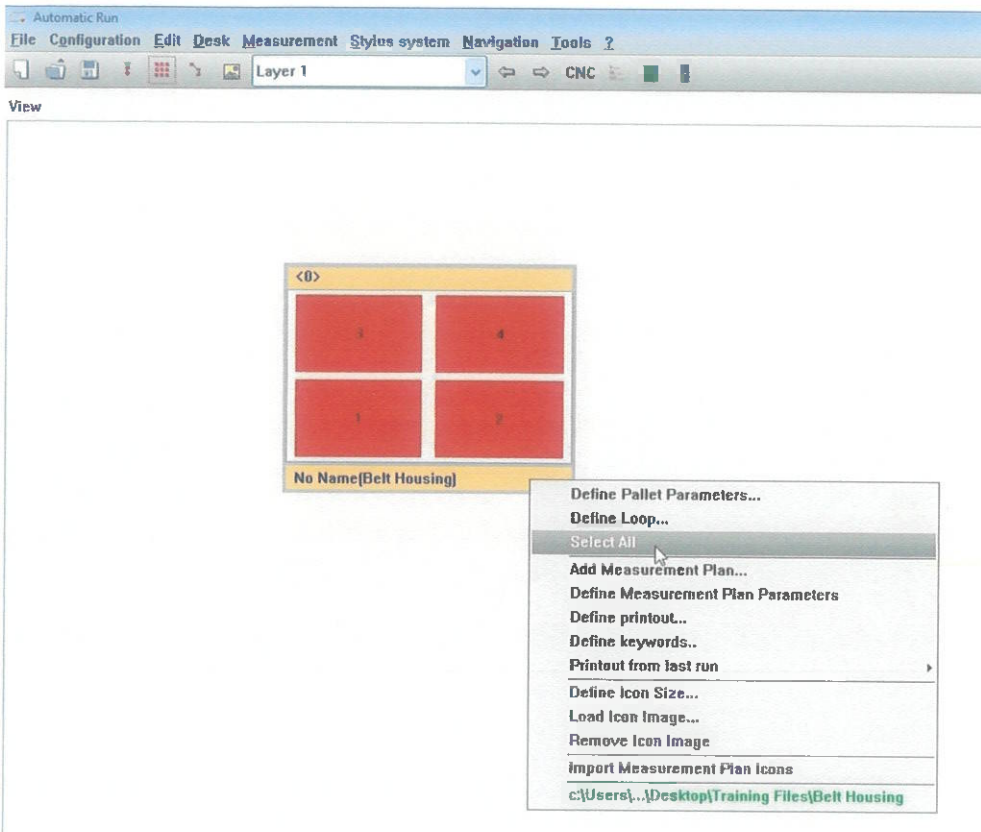

9



10

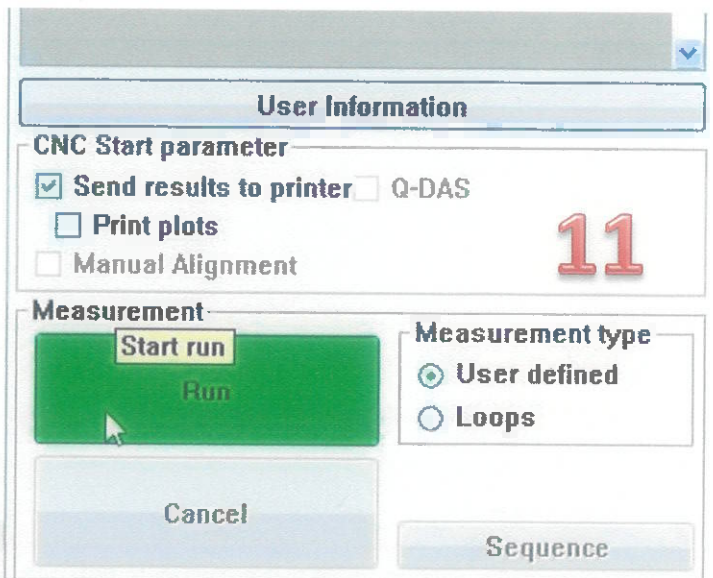

11

