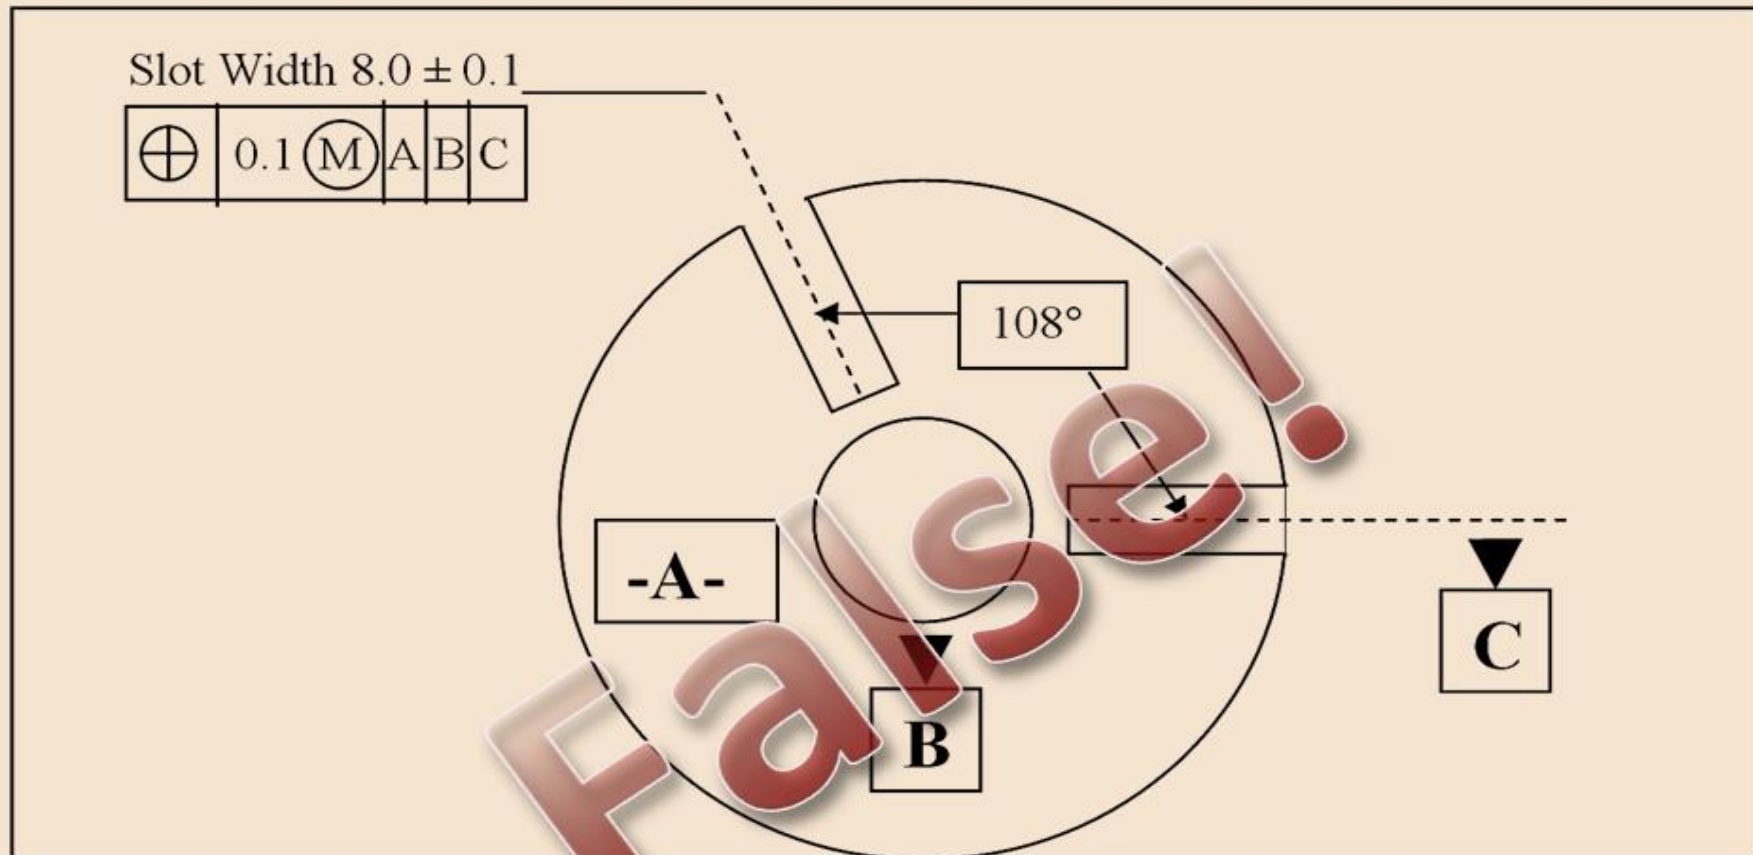


Example:

- In the Diameter ACTUAL field, right click and choose formula. Enter the formula `getActual("Perpendicular1").len` assuming the constructed perpendicular is called "Perpendicular1".