

A. Individual Measurement Plan

- 1. Open "Multiple Report"
- 2. Click the "New" drop down box under "Report Features" and select "Default Report"
- 3. Click the "TXT" icon to remove the "X" so you can output the report
- 4. Click the button with the 3 dots on it to open "Name definitions for output files for this Measurement Plan"

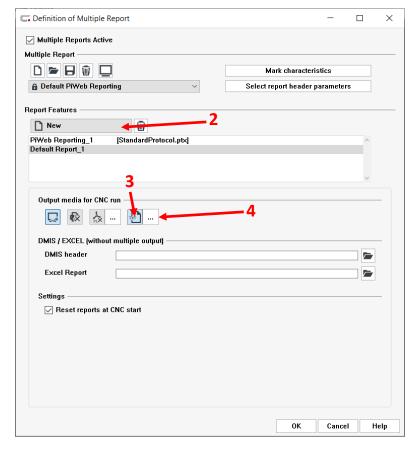


- 5. Select "Default Report"
- 6. Click "Name of output file variable"
- 7. Enter the path where you want to store the files

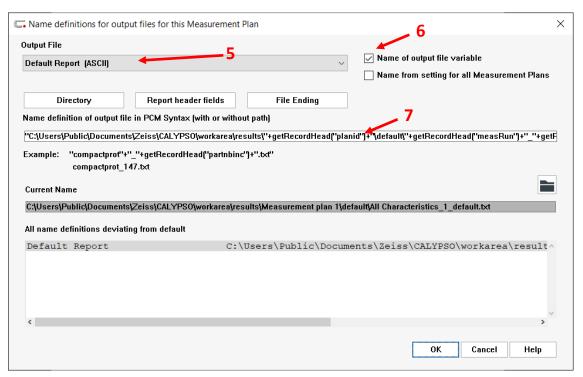


8. Click OK

B. All Measurement Plans

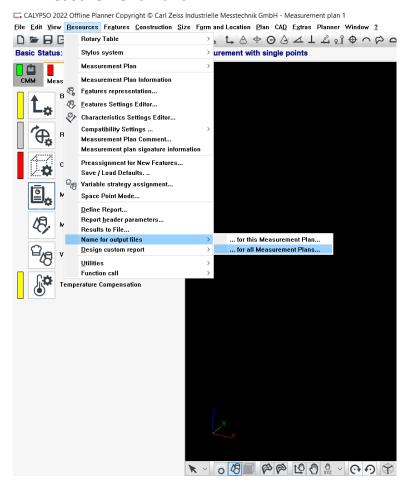


- Select "Default Report"
- 2. Click "Name of output file variable"
- 3. Enter the path where you want to store the files

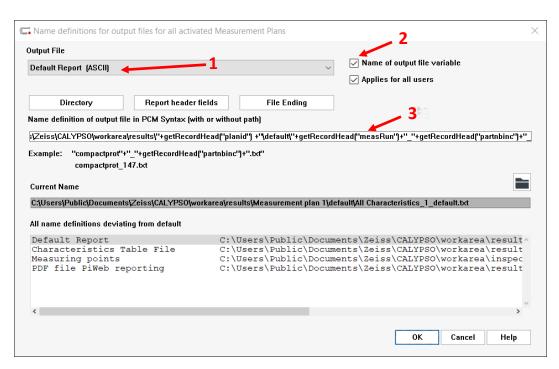

4. Click OK

- 5. Open "Multiple Report"
- 6. Click the "New" drop down box under "Report Features" and select "Default Report"
- 7. Click the "TXT" icon to remove the "X" so you can output the report
- 8. Click the button with the 3 dots on it to open "Name definitions for output files for this Measurement Plan"

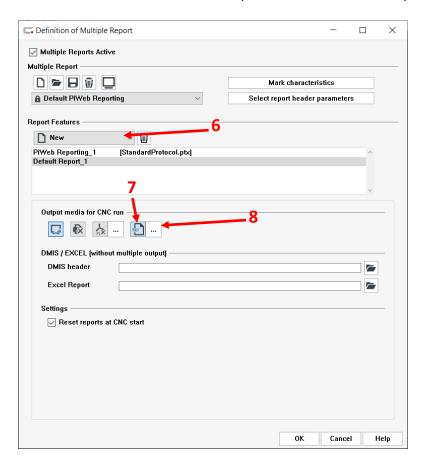

- 9. Select "Default Report"
- 10. Click "Name of output file variable"
- 11. Click "Name from setting for all Measurement Plans"

